


FURROW CRUISER INSTALLATION DIAGRAM

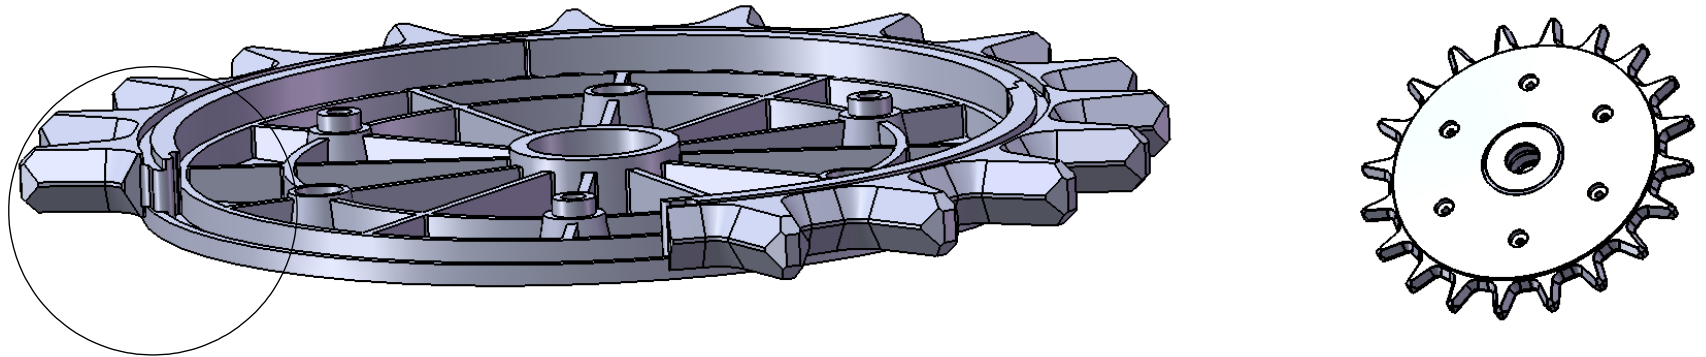

1. REMOVE EXISTING CLOSING WHEELS FROM PLANTER.
2. REMOVE BOLTS HOLDING CLOSING WHEEL TOGETHER.
3. **SEPERATE CLOSING WHEEL HUB BY INSERTING A BOLT INTO THE BEARING AND TAPPING ON THE HEAD OF THE BOLT.**

IF CLOSING WHEELS HAVE A STUD ON THEM, LIGHTLY TAP ON STUD TO SEPERATE HUB.

NOTE: DO NOT USE SCREWDRIVERS TO PRY THE WHEEL APART. YOU WILL DAMAGE THE HUBS.

4. REMOVE THE RUBBER WHEEL.
5. INSTALL FURROW CRUISERS BY ASSEMBLING FOUR PIECES TO CREATE ONE WHEEL.
6. VERIFY OUTER TAB ON CLOSING WHEEL HUB IS FULLY SEATED IN GROOVE OF FURROW CRUISER AS SHOWN IN FIGURE 1.
7. INSTALL OTHER HUB, AGAIN MAKING SURE THE OUTER TAB ON THE CLOSING WHEEL HUB IS FULLY SEATED IN THE GROOVE OF THE FURROW CRUISER.
8. RE-INSTALL CLOSING WHEEL BOLTS AND TIGHTEN.

FIGURE 1

