

Furrow Cruiser Insert Installation Guide

- Install at room temperature. Cold wheels contract, causing fit issues.
- JD 7000/7100 and Kinze Pre-1993 planters with roll pin bearings require a stud adapter kit and new bolt through style hubs and bearings. (7000 Conversion Kit)



1 Take the closing wheels off of the planter. Remove all bolts from the hub of the stock rubber tire.



2 Separate the hubs by inserting a bolt thru the bearing and tapping on the head of the bolt.



3 Continue to tap the bolt and pull apart. Do not attempt to pry the wheel apart with a screwdriver or you may damage the hubs.


Furrow Cruiser Insert Installation Guide




4 Remove the rubber wheel and lay the split hubs flat.



5 Install Furrow Cruiser on hub with bearing. Hub should fit close to exact.

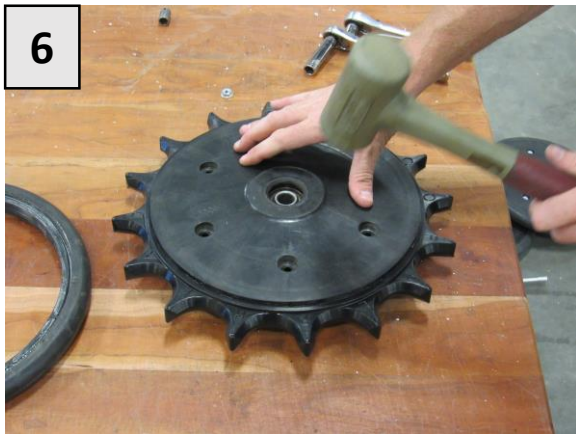

6 Align bolt holes and install the other hub half onto the bearing and tap back together with rubber mallet.

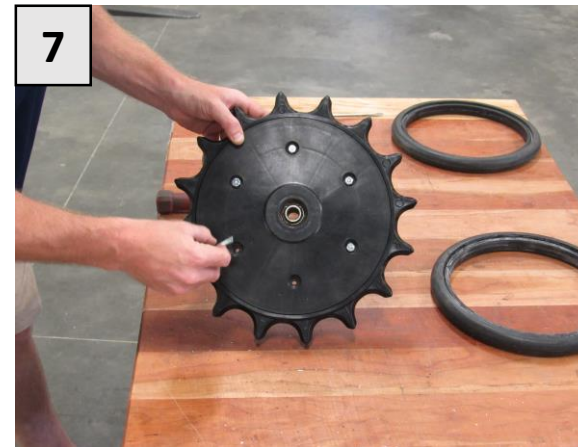

7 Re-install wheel bolts and tighten. The wheels are ready to be put back on the planter.